




Feature and Function

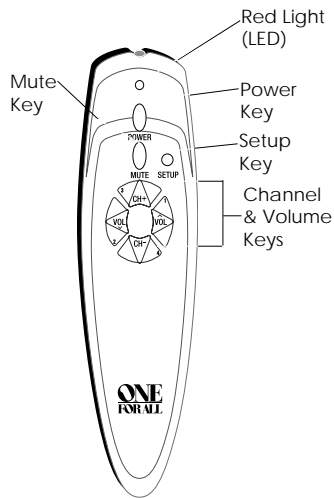

Thank you for purchasing the One For All® 1 Device universal remote control. Before you can use your new remote control, you will need to program it. To do this, you need to tell the remote control what TV set you wish to operate. This is done by following these easy steps.

Step 1: Install two (2) new AAA batteries.

Step 2: Find the code for your TV on the reverse side of these instructions.

Step 3: Enter the code.

Step 4: Use your remote.

Installing the Batteries


Your One For All® 1 Device needs two (2) new AAA alkaline batteries. To install the batteries:

- 1 On the back of the One For All® 1 Device, unscrew and push down on the tab and lift the cover off.
2 Match the batteries to the + and - marks inside the battery case, then insert the batteries.
3 Press the battery cover back into place and replace the screw.
4 Test the unit by pressing POWER. The red light should blink.

Even if your batteries die, the One For All® 1 Device built in memory back-up will save your programmed setup codes. The One For All® 1 Device will also retain the memory for another 10 minutes once you have removed the batteries to replace them.

Looking Up Your TV Code

1 Look at your TV to find the brand name and write it in the space below:

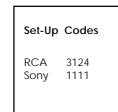

2 Find your TV brand on the reverse side of these instructions. The most popular codes are listed first. Write your codes here:

Grid of 20 empty boxes for writing TV codes.

You will need one of these codes to program your One For All® 1 Device remote control.

1 Turn on your TV.

2 Press and hold SETUP until the One For All® 1 Device's red light blinks twice. Release SETUP.

3 Using the example shown on the right, enter the first four-digit code you wrote down. (See "Looking Up Your TV Code".) If you put in the code correctly, the red light will blink twice.

4 Aim the One For All® 1 Device at your TV and press POWER. Your TV should turn off. If it doesn't, repeat Steps 2-4, trying each code listed for your brand until you find the one that operates your TV.

How to Enter Codes

If your TV code is:

- 3 Press code is: 3 CHA
1 Press code is: 1 VOL
2 Press code is: 2 VOL
4 Press code is: 4 CHA

Troubleshooting

If you cannot get the *One For All® 1 Device* to operate your TV:

- Try all of the codes listed for the brand of your TV in the Set-Up Codes section.
- If your TV responds to some of the commands but causes the wrong results, try all of the codes listed for your brand. Many TV's use similar remote control codes.
- Make sure you are within 15 feet of your TV when using your remote control.
- If the red light on your remote control does not blink when you press a key on your remote control, replace the batteries with two (2) **new** AAA alkaline batteries. Be sure you match the batteries to the plus (+) and minus (-) marks inside the battery case.

world website <http://www.oneforall.com>

AOC	1122, 1114
Admiral	1143, 1234
Aiko	1142
Akai	1122
Alaron	1223
America Action	1224
Anam	1224
Audiovox	1233, 1224, 1142, 1242
Baysonic	1224
Belcor	1114
Bell & Howell	1212, 1112
Bradford	1224
Brockwood	1114
Broksonic	1231, 1234
CXC	1224
Candle	1122, 1133
Carnivale	1122
Carver	1132
Celebrity	1111
Cineral	1233, 1142
Citizen	1134, 1122, 1133, 1142
Concerto	1133
Contec	1224
Craig	1224
Crosley	1132
Crown	1224
Curtis Mathes	1123, 1132, 1212, 1124, 1233, 1143, 1134, 1122, 1144, 1133, 1112, 1214
Daewoo	1233, 1114, 1142, 1242, 1243
Daytron	1114
Denon	1144
Dumont	1113, 1114
Electroband	1111
Emerson	1212, 1231, 1234, 1224, 1222, 1114, 1223, 1242, 1243
Envision	1122
Fisher	1212
Fujitsu	1223
Funai	1224, 1223, 1221

Futuretech	1224
GE	1123, 1124, 1233, 1143, 1222
Gibraltar	1113, 1122, 1114
GoldStar	1122, 1222, 1114, 1133
Gradiente	1131, 1133
Grunpy	1224, 1223
Hallmark	1222
Harley Davidson	1223
Harman/Kardon	1132
Harvard	1224
Hitachi	1144, 1133, 1112
Infinity	1132
Inteq	1113
JBL	1132
JCB	1111
JVC	1131
KEC	1224
KTV	1224, 1122
Kenwood	1122, 1114
LG	1133
LXI	1123, 1132, 1212, 1213, 1222
Logik	1112
Luxman	1133
MGA	1211, 1122, 1222, 1114
MTC	1134, 1122, 1114, 1133
Magnavox	1132, 1122, 1223
Majestic	1112
Marantz	1132, 1122
Matsushita	1232
Megatron	1222, 1144
Memorex	1212, 1232, 1234, 1211, 1222, 1223, 1133, 1112
Midland	1123, 1113, 1124
Mitsubishi	1143, 1211, 1222, 1114
Motorola	1143
Multitech	1224
NAD	1213, 1222, 1214
NEC	1122, 1114, 1133
NTC	1142

Nikko	1122, 1222, 1142
Onwa	1224
Optimus	1212, 1232, 1214
Optonica	1143
Orion	1231, 1234, 1223
Panasonic	1124, 1232
Penney	1123, 1213, 1124, 1134, 1122, 1222, 1114, 1133
Philco	1132, 1234, 1122, 1144, 1114
Philips	1132
Pilot	1122, 1114
Pioneer	1214, 1244
Portland	1114, 1142
Princeton	1312
Prism	1124
Proscan	1123
Proton	1222
Pulsar	1113, 1114
Quasar	1124, 1232
RCA	1123, 1124, 1143, 1114, 1244
Radio Shack	1123, 1212, 1224, 1122, 1222, 1114, 1133
Realistic	1212, 1224, 1122, 1222, 1114, 1133
Runco	1113, 1122
SSS	1224, 1114
Sampo	1122
Samsung	1134, 1122, 1222, 1114, 1133
Sansei	1233
Sansui	1234
Sanyo	1212
Scimitsu	1114
Scotch	1222
Scott	1231, 1224, 1222, 1114, 1223
Sears	1123, 1132, 1212, 1213, 1222, 1223, 1133, 1221
Semivox	1224
Semp	1213
Sharp	1143, 1311

Shogun	1114
Signature	1112
Sony	1111
Soundesign	1224, 1222, 1223
Squareview	1221
Starlite	1224
Supreme	1111
Sylvania	1132, 1122
Symphonic	1221
TMK	1222, 1133
TNCi	1113
Tandy	1143
Technics	1124, 1232
Technol Ace	1223
Techwood	1124, 1133
Teknika	1132, 1224, 1211, 1134, 1114, 1223, 1133, 1112, 1142
Telefunken	1133
Toshiba	1212, 1213, 1134
Vector Research	1122
Victor	1131
Vidikron	1132
Vidtech	1222, 1114
Wards	1132, 1122, 1222, 1114, 1223, 1133, 1112
White Westinghouse	1234, 1242, 1243
Yamaha	1122, 1114
Zenith	1113, 1234, 1112, 1142, 1243

Additional information

One For All® is the registered trademark of Universal Electronics Inc. Computime International LTD. is the Licensee of the ONE FOR ALL® brand for the United States of America and Canada.

Copyright 1999 by Universal Electronics Inc. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc.

One For All® is designed for compatibility in North America excluding Mexico.